




Instructions

FL-2000

Anchor Audio, Inc. • 3415 Lomita Blvd. • Torrance, California 90505 • (310) 784-2300 fax 784-0533

Traveler Portable Lectern

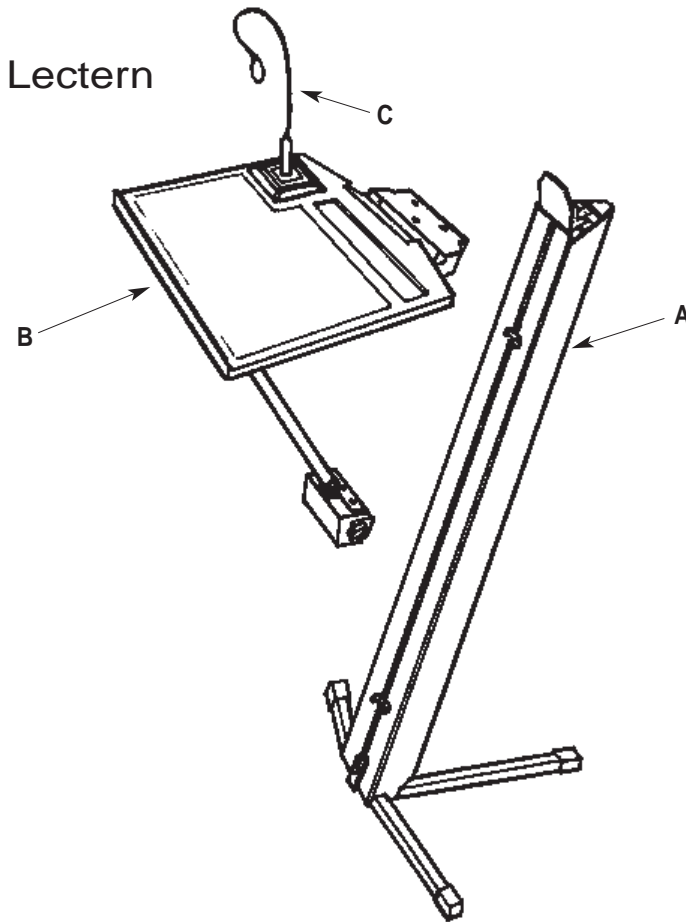

Contents


- A stand assembly
- B table / bracket assembly
- C LM-618 microphone

Set-up and Assembly Instructions



Your Traveler lectern will be ready to use in just a few minutes. If you just purchased the unit and are assembling it for the first time, first unpack the contents and follow the steps below. Then continue on to the instructions on the back page.

Set up and Use.

1. Press the silver release button and slide legs out, then open each leg into position.
2. Pick up stand with one hand on carrying handle and other hand on the side leg pointing up. Place the other side leg and center leg onto floor and stand (rotate) the unit into position.

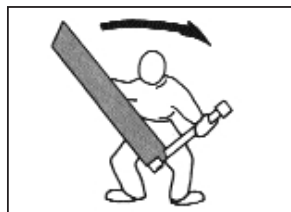

3. The stabilizer on bottom of the stand helps compensate for different floor surfaces. To adjust, loosen the thumb-screw and slide the stabilizer up or down. Then retighten screw. (Do this step after table has been mounted.)
4. *See back page instructions for table mounting and adjustment.
5. Use the cable clips to hold mic cable in place. To adjust position of clips, rotate 90° and slide up or down.

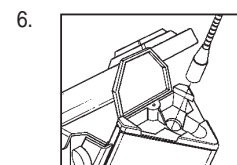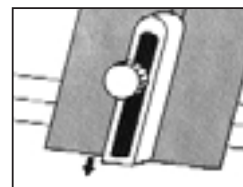

Plug the microphone (which stores inside the top cover as shown) into shockmount. Plug a mic cable into XLR jack on bottom of table.

100-0063-000, rev. B

Traveler Portable Lectern Table Assembly

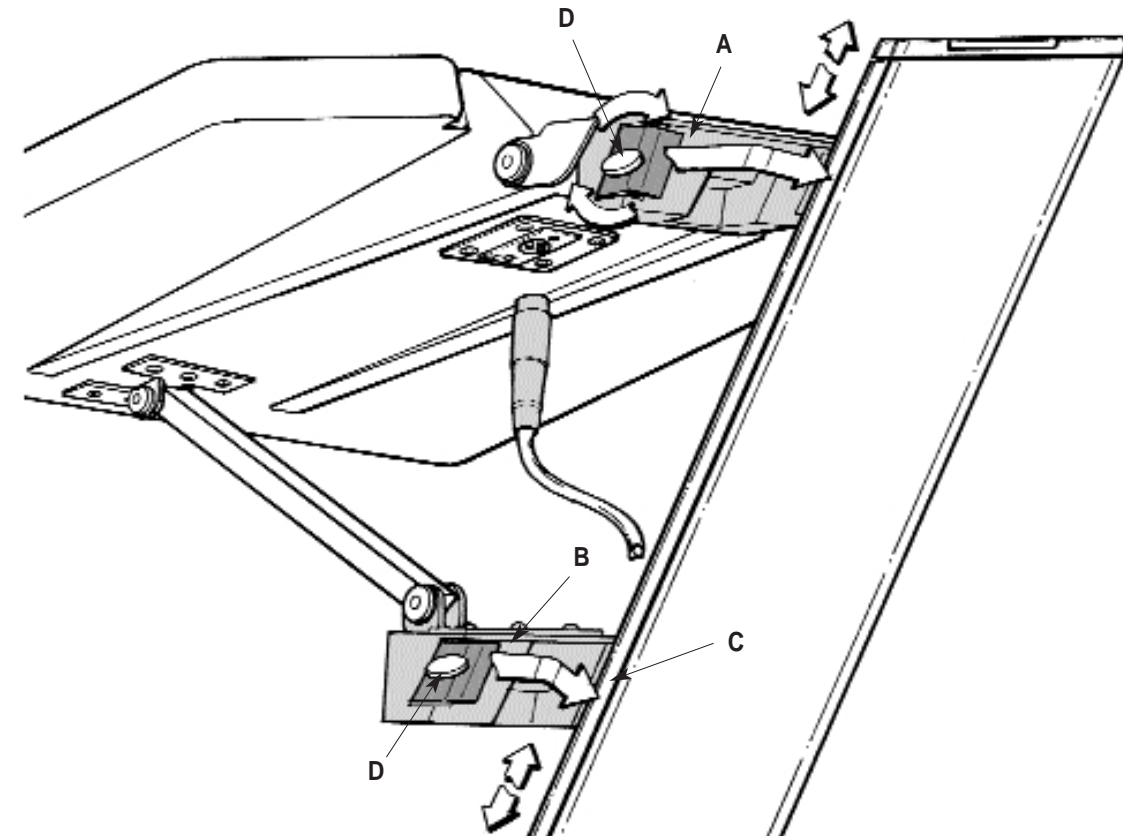


Table assembly.

1. This section explains how to install the table assembly to the stand. (This is only required when you first purchase your lectern.) Mount table assembly to the stand by fitting tongues of top (A) and lower (B) brackets into groove (C) on each side of column.

Table adjustment.

1. Use the top bracket (A) to adjust the height of the lectern table and the lower bracket (B) to adjust the angle.
2. After adjusting table, tighten T-screws (D) to secure table to column.
3. To fold the table down for transport, loosen T-screws (D) on lower bracket and slide the bracket down until table is flush against column. Tighten T-screw.